

Horizontal vacuum pad with joint thread (without buffer): EZPR series



接管方式/ Joint thread	快速接头/ Quick connector
真空入口/ Vacuum inlet	水平方向/ Horizontal
安装连接方式/ Installation connection mode	外螺纹/ Male thread



接管方式/ Joint thread	快速接头/ Quick connector
真空入口/ Vacuum inlet	水平方向/ Horizontal
安装连接方式/ Installation connection mode	内螺纹/ Female thread

EZPR系列 (不带缓冲) 型号/EZPR series code(without buffer).

EZPR 02 UN - 04 - A5

请参阅
吸盘型号EZP系列
Refer to pad code
EZP series.

真空入口
Vacuum inlet
见右表
See the table

安装连接方式
Installation
connection mode
见右表
See the table

符号/ Symbol	螺纹外径/软管/ Thread OD/Tube	φ2 ~ φ8	φ10 ~ φ16	φ20 ~ φ32
真空入口/ Vacuum inlet	外螺纹/ Male thread			
	04	φ4尼龙管/PA tube	•	•
	06	φ6尼龙管/PA tube	•	•
安装连接方式/ Installation connection mode	快速接头/ Quick release connector			
	A5	M5x0.8	•	•
	A6	M6x1.0	•	•
	A8	M8x1.0		•
	内螺纹/ Female thread			
	B4	M4x0.7	•	
	B5	M5x0.8	•	•
	B6	M6x1.0	•	•
	B8	M8x1.25		•

Outline drawing(mm)

适用吸盘直径/
Applicable pad diameter
φ2 ~ φ8


适用吸盘直径/
Applicable pad diameter
φ10 ~ φ16

适用吸盘直径/
Applicable pad diameter
φ20 ~ φ32

适用吸盘直径/
Applicable pad diameter
φ2 ~ φ8

适用吸盘直径/
Applicable pad diameter
φ10 ~ φ16

适用吸盘直径/
Applicable pad diameter
φ20 ~ φ32

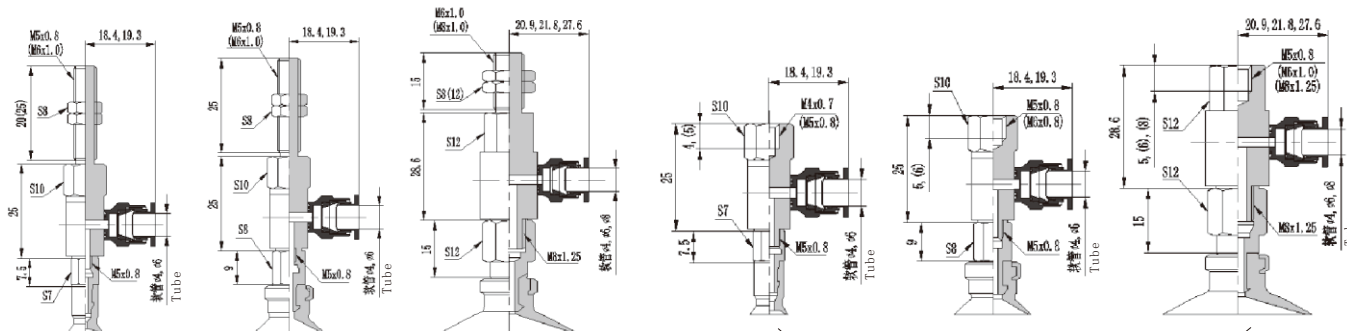

各类吸盘尺寸图见EZP系列之外型尺寸图/
Pad dimension as EZP outline drawing

各类吸盘尺寸图见EZP系列之外型尺寸图/
Pad dimension as EZP outline drawing